GR2P HD Color Screen Digital Display Smart Rail Meter

- User Manual -

 


 
This Meter is used to measure the voltage, current, power, power, frequency, electricity bills and other data of the single-phase AC power, as well as control and safety protection alarm functions.

Application and specification

*This Meter is applicable to the measurement and control of voltage, current, power, electricity quantity, frequency, electricity charge and other data of AC power. It is suitable for single-phase AC power supply with voltage of AC50-320y(0-100A.50/60HZ

Installation and wiring





System settings

Long press the "M" button to enter the background setting interface, then short press the M button to switch the setting column, when there is a number flashing, short press the +/- button to adjust the number, and then long press the +/- button to carry or abort the flashii

ng number To make adjus	tments:	
ATORCH GR2I 01.中文 English 02.Display Brightness 03.Standby Brightness 04.Enter Standby time 05.Key Beep ON		Short press to page down display, long press to switch mode When the number is flashing, press and hold to continuous add
06.Price 07.Over-Voltage 08.Over-Current	:0001.00 :265.0V :100.0A :26500W	O Long press to enter the background, in the background is a short press to switch the menu

10 Under-Voltage -075 OV Short press to page up display. long press to switch mode 11 Switching Model *Controlled When the number is flashing, 12.Standby Screen:Measurement press and hold to continuously reduce 13.Wi-Fi Device Reset(Not Have) 14 Date Zero

19.System All Default Setting 1) Overvoltage, overcurrent and undervoltage protection threshold; when this threshold is reached.

an alarm interface will pop up, and the output will be turned off if the relay type is used: 2) Standby screen: If it is set to simple measurement, it will enter the measurement interface mode

with large numbers when the standby time is reached: 3) Clear the accumulated data: press the "+" button to this column, and the word "OK" will pop up

to make it clear that the accumulated electricity bill data is zero; 4) WiFi settings reset: If you have changed the WiFi network account password environment, please reset this column to reconfigure the network:

5) Restore factory settings: restore all data to factory values (short press the M key to this column and then long press the "+" key for 3 seconds to

reset the system) 6. The background interface will be updated from time to time, there will be slight differences. Please mainly receive the actual product. This company does not make separate notices. Please understand.

Basic version(GR2P): only prompt alarm not cut off nower WiFi not supported WiFi version(GR2PW): only prompt alarm not cut off power Supports WiFi setting and remind

WiFi Switch Version(GR2PWS): Su			and remind
(Note: Insufficient power, this function Electrical parameter		app operation, GR2P And 0	GR2PW version has no function
Function/Project	Normal version	WiFi Internet Version	
Product name:	Basic version	WiFi version	WiFi switch version
Product model:	GR2P	GR2PW	GR2PWS
Measurement voltage range:	AC50-320V / 50-60Hz		
Measurement current range:	0-100A		
Measurement power range:	0-32.0kW		
Measurement range range:	0-99999kWh		
Measurement accuracy range:	± 1%		
Power factors:	0-1.00PF		
Product size:	45x36x80mm Rail installation Size: 35mm		
Work temperature:	-20°C~+60°C		
Mobile phone control:	No	Tuya or smart life app	
Hardware upgrade:	No	No WIFI remote network firmware upgrade	
Power off memory:	support support		
Other functions:	No	For more distable release section the electrical items or the sector items	

Bluetooth connection or WiFi connection steps

Bluetooth version: Search for E test in the Apple app or scan the Android code to download and install it, then click the icon to open the APP, then click the Bluetooth icon in the upper left corner of the interface to enter the list and display the GR2P-BLE model, and then click the model to automatically return to the main interface of the APP. At this time, the bluetooth icon of the host changes from the original gray to blue and you hear the beeping sound of

the speaker, which means that the connection to the computer is successful, and the data starts to be transmitted and displayed synchronously.

WiFi version:

Scan the QR code displayed on the host to download the Smart Life APP or Tuya APP, and operate according to the methods and steps displayed on the interface to connect to the Internet

Warning:

If the model GR2P BLE cannot be displayed after clicking the Bluetooth icon in the upper left corner of the APP interface, please enter your mobile phone settings to open the storage permission and location information options of this APP! After these two items are fully turned on, return to the APP interface and then enter to display the model correctly.

Software download and after-sales

APP software and download address; http://www.atorch.cn (Please refer to the official website for more details)

Notice: Because the hardware or software code of the product will beupgraded and updated constantly, the display interface of this table will also beupgraded and changed. If the actual product in the current period is slightly different from this description, we will not make further notice, please understand Safety warning: The input of this product is strong electricity. Do not touch the metal parts with electricity during use. Be sure to pay attention to safety.

WIFI version please download





Please search for tuya name or smart life name in Google Play/


Apple Store Download app and install! Support andorid 5.0 above app and IOS 8.0 above APP!



For more information, please scan the OR code to visit the official website



Pay attention to safety, please strictly follow the wiring in the manual!

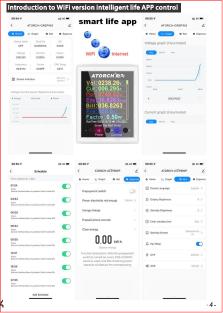

高清彩屏数显智能导轨电度表

- 应用说明 -

 


本设备用以测量显示两相交流电的电压、电流、 功率、电量、频率、电费等数据以及控制与安全 保护告警功能

适用范围与电测规格

- *本仪表适用测量显示交流电的电压、电流、功率、电量、频率、电费等数据以及控制。
- *适合于所有工作电压在AC50~320V 50/60HZ 100A的两相交流电源。

接线与安装





WiFi联网说明: (非联网款无需

请扫描右图二维码或在安卓应用市场、苹果应用 App store里搜索 "智能生活"下载安装后再 添加设备(务必使用2.4G网络连接、务必打开手机 陈牙以及GPS定位权限)



使用设置:

长按 "M" 按键进入后台设置界面,再短按M键切换设置栏目,有数字闪烁时再短按+/-键调整此数字,如此时再长按+/-键是进位或退位闪烁数字进行调整:

ATORCH GR2P/W Menu Vx.x.x	
01.中文 English	
02.工作屏幕亮度 :9	
03.待机屏幕亮度 :3	
04.进入待机时间 :60S 05.系统声音 开	短按加数长按连续加数 或短按选择与执行当前栏目
06.电费单价 单费率模式	
07.过圧门限 :265.0V 08.过流门限 :100.0A 09.讨功率门限 :26500W	→ 长按进入后台, 在后台是短按 切换菜单
10.欠压门限 :075.0V 11.开关模式: 可控	─ 短按減数长按连续减数 或短按选择与执行当前栏目
17 累和数据清票	1 -

- 1) 讨压讨流欠压保护门限: 达到此数值门限弹出告警界面, 如继电器数式会关斯输出:
- (2) 待机画面:如设置成简测,达到进入待机时间会进入超大数字的测量界面模式:
- 累积数据清零: 到此栏按"+"按键弹出OK字样清楚累积电量电费数据为零;
- 4) WiFi设置重置: 如更换了WiFi网络账号密码环境:请重置此栏重新配网;
- 恢复出厂设置主量、如更换了WIFI的组织与否则不规则主直配行主制能构。
 恢复出厂设置:恢复所有数据到出厂值(指按M键到此栏再长按"+"键3秒系统复位)
- 6)后台界面不定期会更新会有细微差异,请以收到实际产品为主。本司不作另行通知,请谅解
- 报警功能:

18.Wi-Fi设置重置 19.恢复出厂值

- 直通基础版(GR2P):仅提示报警不断电,不支持WiFi.
- 直通WiFi版本 (GR2PW):仅提示报警不断电,支持WiFi设置和提醒. 音通WiFi开关55本 (GR2PWS):支持WiFi、提示报警和新电.
- (注意:由量不足,此功能需要wifi版本的应用程序操作。GR2P和GR2PW版本没有功

(江樹、哈里小龙,此初能需要WII版中的欧州技术来评,GREF机GREF W版中汉特别能)				
电性参数:				
功能/项目	普通版本	WIFI联网版本		
产品名称:	直通基础版	直通WiF版	直通WiFi开关版	
产品型号:	GR2P	GR2PW	GR2PWS	
测量电压范围:	AC50-320V / 50-60Hz			
測量电流范围:		0-100A		
测量功率范围:	0-32.0KW			
测量电量范围:	0-99999Kwh			
测量精度范围:		±1%		
功率因素:		0-1.00PF		
产品尺寸:	面板尺寸:长45mmx宽3		mx宽36mm 轨道安装尺寸: 35mm	
工作温度:		-20°C~+60		
手机控制:	无	涂鸦	或者智能生活APP	
固件升级:	无	WiFi	元程网络固件升级	
断电记忆:	支持		支持	
其他功能:	无	其他!	E多细节请以收到实物为准	

WiFi版本智能生活APP操控简介:









FIND 1 AP11085 90

实时监测电量日报/月报/年报

收告与<u>售后信息</u>

告: 因产品的硬件或软件代码会不断升级与更新, 本表显示界面也会升级变更, 如果当 前时间段的实际产品与本说明有细微差异,本司不作另行通知,敬请谅解!

安全警告: 本设备输入的是强电, 使用中不可带电触磷金属部分, 务必注意安全! 如是因为用户自行使用不当或者故意金属物接触所导致的触电事故,需用户自行承担后果!

售后服务以及建议: 手机 13068724518 / VX 13068724518

更多产品的详细信息请查阅官网 http://www.atorch.cn



联网说明: 扫描主机配网界面的二维码下载或应用商店搜索智能生活APP下载并安装,按主机界面显 示的方法与步骤操作联网则可 (条必使用2.4G网络连接 条必打开手机蓝牙以及GPS常位权限

Warranty card

尊敬的用户

感谢您购买本公司的电脑常多功能测量控制仪。本公司所有产品均重导15天机块。6个目保格的售后服务改炼、为了 确保你的会注到益 请详细阅读太保修专并买售保管

使用说明 1 此保修卡作为木公司产品保修的第一保证

2.产品自售出之日起15天内,如发生性能放揮,产品本身及包裝完整、无划伤,即可更换同型号的产品(人为因素除外)3.产品自出售之日起6个月内,如发生性能放揮,可享受有偿保修服务 4.超出产品保修期的不在保修范围内

5配件不在保修范围内 6.非工作人是自行报机的不在保修范围内 7.未能提供保备卡的不在保格范围内

保修i	己录
Warranty	record

产品型号 Model	购买日期 Date of Purchase	
保修内 Warran	维修日期 Warranty Date	

合格证 Certificate 出厂日期 Date of manufacture 松蛤昂 Inspecto: ____

今产商: 东京古里科市子科可有限公司